

CARTRIDGE LOADER INSTRUCTIONS



PERFORMANCE UNDER PRESSURE SINCE 1986

Prepare the Screw Prime Gun

1. Remove head from Screw Prime Gun
2. Piston of the gun to be at top of barrel

Loading the Cartridge Loader

3. Pull the cartridge into the Cartridge Loader with the T-Handle
4. Have lubricant at top of Cartridge Loader (to prevent an air pocket in the gun)

Injecting Lubricant into the Screw Prime Gun

5. Screw Cartridge Loader onto the sealant barrel
6. Place the Cartridge Loader T-Handle on the floor
7. Apply slight pressure to the gun while turning the gun's handle
8. Once the T-Handle of the Cartridge Loader is completely inserted the gun is loaded
9. Unscrew Cartridge Loader from Sealant Barrel
10. Thread the Head onto the Screw Prime gun body
11. The Screw Prime gun is ready to be attached to the valve



Supplying the
Highest Quality Products
to the Valve Industry

#310, 8810 - 15 St
Edmonton, AB | T6P 0B9 | 780.416.4823
GRMFLOW.COM SALES@GRMFLOW.COM



GEN_EZ_12/15